



Fig. 3 Cylinder Head Assy(Y385)(With pressure-Reducing Device)

Fig. No.	Ser No.	Fig./Ser. No.	Parts No.	Name of Parts	Qty.
3	1	F3S1	Y485-03019	Spring seat cover(upper)	6
3	2	F3S2	Y485-03008	Valve collets	12
3	3	F3S3	Y480G-03009	Valve spring seat(upper)	6
3	4	F3S4	Y480G-03007	Valve spring (outer)	6
3	5	F3S5	Y480G-03017	Valve spring(inner)	6
3	6	F3S6	Y485-03018	Valve spring seat(lower)	6
3	7	F3S7	Y485-03102	Valve stem guide	6
3	8	F3S8	Y385-03101	Cylinder head	1
3	9	F3S9	Y485-03104	Exhaust valve seat	3
3	10	F3S10	Y485-03015a	Exhaust valve	3
3	11	F3S11	GB/T6170-M8	Nut M8	25
3	12	F3S12	GB/T848-8-140HV	Washer 8-140HV	25
3	13	F3S13	Y480G-03016	Thermostat housing gasket	1
3	14	F3S14	GB/T898-M8×25	Stud M8×25	4
3	15	F3S15	GB/T898-M8×30	Stud M8×30	6
3	16	F3S16	Y485-03006a	Exhaust pipe gasket	3
3	17	F3S17	Y480Q-5-03001	Rocker arm seat fixed bolt	3
3	18	F3S18	Y480G-01107	Stopper	3
3	19	F3S19	Y480-01103	Bowl-shaped plug piece(Φ25)	5
3	20	F3S20			
3	21	F3S21	Y480G-03105	Swirl-chamber splice block	3
3	22	F3S22	GB308-84	Steel ball 3.0000	3
3	23	F3S23	Y480G-03300	Front hoisting ring weldment	1
3	24	F3S24	GB/T5783-M80×20	Bolt M80×20	4
3	25	F3S25	Y480G-01108	Stopper	1
3	26	F3S26	Y480G-01109	Bowl-shaped plug piece(Φ44)	1
3	27	F3S27	S195-03013	Injector holddown	3
3	28	F3S28	Y480G-03020	Stud	6

3	29	F3S29	Y485-03013	Intake pipe gasket	3
3	30	F3S30	Y480G-03012	Rear hoisting ring	1
3	31	F3S31	Y480G-03103	Intake valve seat	3
3	32	F3S32	Y485-03014b	Intake valve	3
3	33	F3S33	GB/T894.1-16	Check ring 16	2
3	34	F3S34	Y480G-03208	Rocker arm bush	6
3	35	F3S35	Y485-03201	Valve clearance adjusting screw	6
3	36	F3S36	Y480Q-5-03201	Valve rocker arm	6
3	37	F3S37	Y480Q-5-03202	Rockshaft carrier	2
3	38	F3S38	Y480G-03204	Rockshaft spring	2
3	39	F3S39	Y480G-03210-2	Rockshaft Stopper	2
3	40	F3S40	Y380-03210-1	Rockshaft	1
3	41	F3S41	Y480Q-5-03207	Rockshaft rear carrier	1
3	42	F3S42	GB848-85	Washer 6-140HV	1
3	43	F3S43	Y480G-03206	Rockshaft locating screw	1
3	44	F3S44	GB6170-86	Nut M8×1	6
3	45	F3S45	GB5782-86	Bolt M80×60	3
3	46	F3S46	Y380-03005	Cylinder head bonnet gasket	1
3	47	F3S47	Y380-03209	Cylinder head bonnet	1
3	48	F3S48	Y480G-03003a	Filler cap gasket	1
3	49	F3S49	Y480G-03400	Filler cap assy	1
3	50	F3S50	GB/T923-M8	Cap nut M8	3
3	51	F3S51	GB/T898-M8×55	Stue M8×55	6
3	52	F3S52	Y380-03211	Decompression shaft	1
3	53	F3S53	GB/T6171-M8×1	Nut M8×1	9
3	54	F3S54	Y480Q-5-03217	Decompression adjusting screw	3
3	55	F3S55	GB/T984.1-14	Check ring 14	2
3	56	F3S56	Y480Q-5-03218	Cross connection	1
3	57	F3S57	Y480Q-5-03212	Gasket	2
3	58	F3S58	Y480Q-5-03213	Decompression control plate	1
3	59	F3S59	Y480Q-5-03216	Decompression rocker arm bush	1
3	60	F3S60	GB/T3452.1-13.2×25	O-ring seal 13.2×25	1
3	61	F3S61	Y480Q-5-03215	Torsio spring	1
3	62	F3S62	Y480Q-5-03220	Decompression rocker arm weldment	1
3	63	F3S63	Y480Q-5-03214	Limting pin	1
3	64	F3S64	GB/T5783-M8×25	Bolt M8×25	3
3	65	F3S65	GB/T859-8	Washer 8	3